

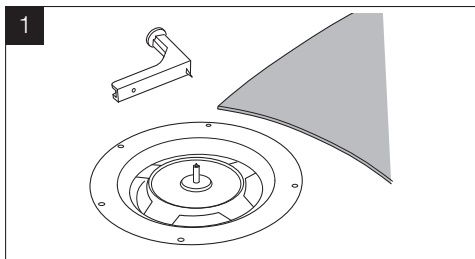


! Read the installation instructions from the supplier of the vinyl/PVC or waterproof membrane for tiles and tile adhesive carefully before commencing the installation.

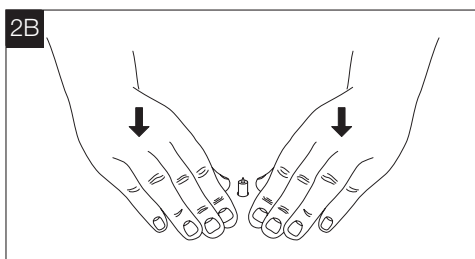


First remove the clamping ring and place the bottom section of the Purus knife into the clamping ring seat in the gully.

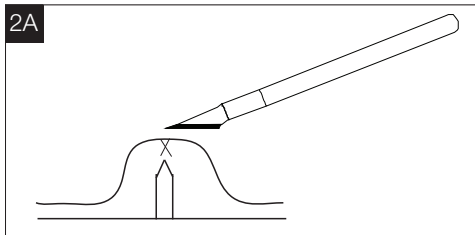


Place either the waterproof membrane or vinyl sheet flooring over the gully and bottom part of the knife, then install the sheet vinyl flooring or waterproof membrane as per the manufacturer's instructions.

When this is secure and fixed, locate the spike of the knife and cut a cross in the waterproof membrane or vinyl sheet flooring, and press down so that the spike pushes through.

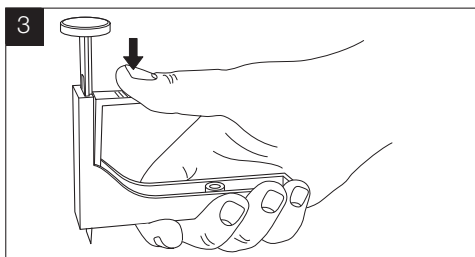


Apply slight pressure onto the arm release of the knife holder so that the blade locks into position.


! The Purus knife is extremely sharp so please take extra care.

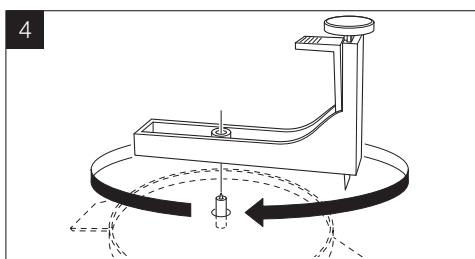


Place the arm of the knife on the spike and spin the knife 360°, cutting a full circle.

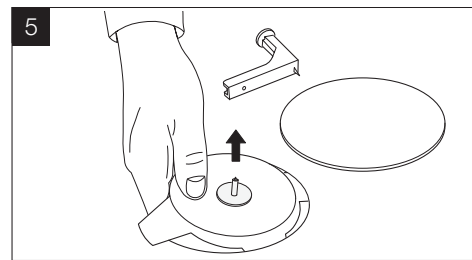


Remove the cut-out circle and the bottom section of the Purus knife from the trap.

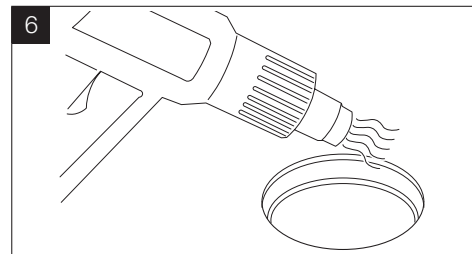

Heat the vinyl around the trap hole. Do not overheat! **NOTE: The waterproof membrane for tiles should not be heated.**

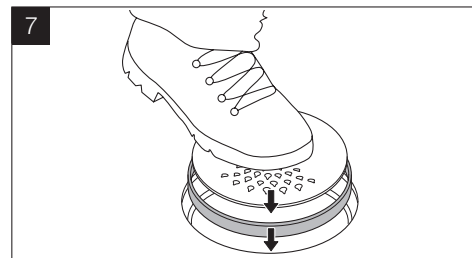

For vinyl sheet flooring, ensure that the vinyl is warm and malleable before installing the clamping ring. Take the clamping ring with the text facing upwards and place the grating on top of it. Press them both firmly down into the gully until the ring has clicked in and both the grate and clamp are fully secured. For waterproof membrane for tiles, use the vinyl grate to help you install the clamping ring and throw this grate away afterwards as you must fit a dedicated Purus tile grate.

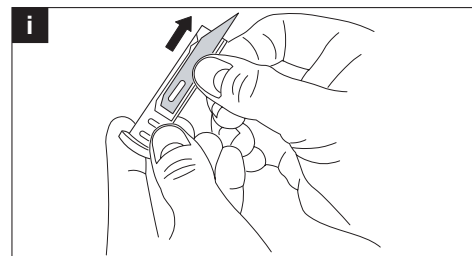

To change the blade, pull the holder all the way out of the body.

Spare blade: Stanley 5903 or Purus species (Prod. code 52582).

Fully test the system for leaks before using the shower.